

What is Ronseal Hardwood Garden Furniture Cleaner?

Ronseal Hardwood Garden Furniture Cleaner is a fast acting cleaner that removes grease and dirt from both new and previously treated hardwood garden furniture. Algae and mildew can be removed by cleaning with **Ronseal Hardwood Garden Furniture Cleaner** and a scrubbing brush. It is ideal for use prior to applying a finish or for regular maintenance to keep garden furniture looking good.

Where should it be used?

Ronseal Hardwood Garden Furniture Cleaner can be used on all hardwood garden furniture including new or previously treated. It can also be used on garden softwood furniture. Do not use on waxed or polished surfaces.

APPLICATION

1. Any loose dirt should be removed with a brush before use. 2. Spray liberally onto the area to be cleaned and work the cleaner into the wood with a scrubbing brush. 3. Leave for 10 minutes, then rinse off with clean water and a scrubbing brush and allow to dry thoroughly. Always test on a small inconspicuous area before use.

For further advice please contact:

Ronseal Technical Services, Tel: 0114 240 9469

Ronseal Ltd, Thorncliffe Park, Chapeltown, Sheffield. S35 2YP
Tel: 0114 246 7171 Fax: 0114 245 5629 enquiry@ronseal.co.uk
Ronseal and Ronseal Does Exactly What it Says on the Tin are registered trademarks of the Sherwin-Williams Company © 2010.



WISE PRECAUTIONS

Keep out of reach of children. Avoid contact with eyes. After contact with skin, wash immediately with plenty of soap and water. In case of contact with eyes, rinse immediately with plenty of water and seek medical advice. Protect from frost. Do not use if temperature is below 10°C or in conditions of high humidity. To avoid risk of spillage always store and transport in a secure and upright position.



750ml e
Made in the UK



DOES EXACTLY WHAT IT SAYS ON THE TIN®